A68(W) Quick Start Guide

Version: 2.0

2017-5-26



Content

1.1. Power up 1.2. Connection 1.3. Installation instruction 1.4. Wiring instruction 1.5. Check IP 1.6. Enter the Setting of telephone 2. Quick Configuration 2.1. Enter the Setting of phone 2.2. Account Configuration 1 2.3. Configuration	1. Installation and access	3
 1.3. Installation instruction 1.4. Wiring instruction 1.5. Check IP 1.6. Enter the Setting of telephone 2. Quick Configuration 2.1. Enter the Setting of phone 2.2. Account Configuration 	1.1. Power up	3
 1.4. Wiring instruction 1.5. Check IP 1.6. Enter the Setting of telephone	1.2. Connection	4
 1.5. Check IP 1.6. Enter the Setting of telephone	1.3. Installation instruction	5
 1.6. Enter the Setting of telephone 2. Quick Configuration 2.1. Enter the Setting of phone	1.4. Wiring instruction	7
 Quick Configuration	1.5. Check IP	7
2.1. Enter the Setting of phone	1.6. Enter the Setting of telephone	7
2.2. Account Configuration	2. Quick Configuration	8
-	2.1. Enter the Setting of phone	8
2.2. Configure the WiFi on the WEP 1	2.2. Account Configuration	10
2.5. Configure the WIFI on the WEB	2.3. Configure the WiFi on the WEB	11



1. Installation and access

1.1. Power up

1) Plug in the power jack with DC 5V/2000mA or POE

2) It will display Welcome logo and the Status led will be lighted once.

3) After absolute boot up, User can select the Language and time manually, and choose to connect the WIFI or not in the WIFI phone.

	Language
 English 	
○ Français	
О Русский	
○ Español	
○ 中文	
○ 繁體中文	
Save	
N	TP Settings
1. Time Zone	+8China(Beijing)
2. NTP Server	pool.ntp.org
3. NTP Server 2	time.windows.com
4. Daylight Saving	Disabled
Save	Switch Back
W	′iFi settings
1. Wireless	Close
	Switch Back




1.2. Connection

1) Connect to network

Connect network cable:

A68(W) is able to be connected with network via LAN port. Under the Bridge mode, other devices (Laptop, IP phone) is able to access network via the PC port of A68(W). Look as below scene:

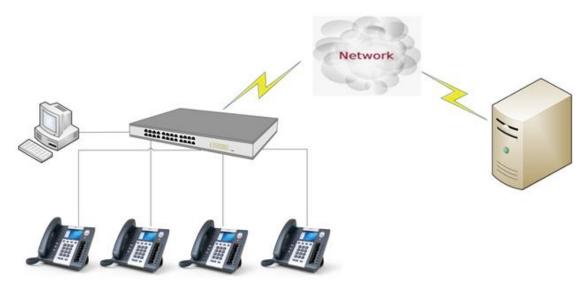

Connect WiFi: Look as below scene:



1. Press "Menu"→"WIFI Settings"→"Switch", open the WiFi connection mode.

2. Please move the navigation key to check the WIFI you want to connect, Press "**Connec** \mathbf{t}'' , then input the correct WiFi password.


3. Return to the standby interface, and phone successful connected to the WiFi.




1.3. Installation instruction

1. Stand bracket installation instruction


A. Put the bottom side of the IP phone upside and press one-side joints of stand bracket into the slot, please refer the picture as below:

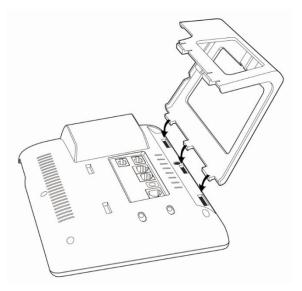

B. Press the other side joints into the slot according to the direction of the arrow:

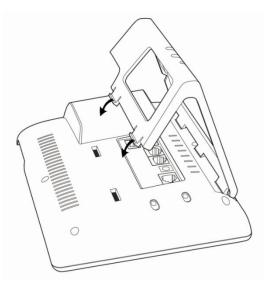


C. It is the right picture after fixing the stand bracket below:

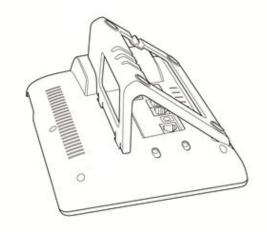

D. Disassemble the stand bracket:


Push the spring joint of stand and pull the stand according to the direction of the arrow. When the joints are pulled out of the slot, you can take off the stand bracket

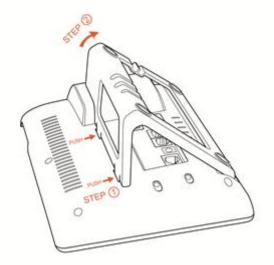



1.4. Wiring instruction

After stand bracket fixed, please plug in all wires or cables as below:

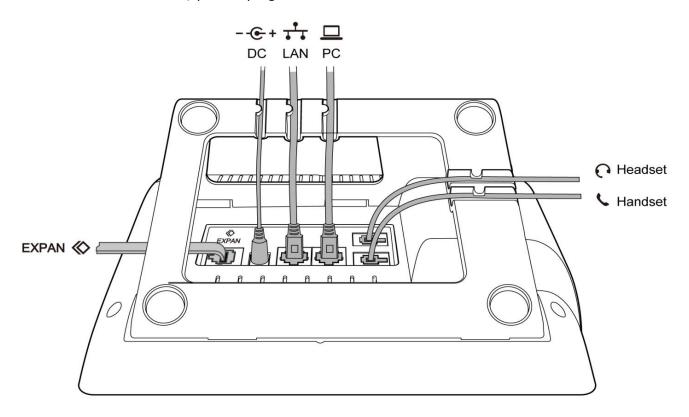

1.5. Check IP

The phone uses DHCP mode by default,

You can review its current IP address by pressing \checkmark key when it is powered on and connected to the network.

1.6. Enter the Setting of telephone

Connect the PC and telephone in the same network, input the IP address of telephone at a browser and press "Enter", you will be required to input the username and password to access the web page. The username/password as below:

Username	Password	Description
admin	admin	For Administrators
user	user	For General Users



2. Quick Configuration

After login to the webpage, you're able to set the phone by quick configuration. Configure it quickly via Web: **"Basic"→"Wizard"**

User should set the below two parts in turn,

1.Network—LAN Port

2.Account——SIP

2.1. Enter the Setting of phone

There are 2 options for network access,

Status Wizard Internet Port DHCP Static IP Address	atcom	Basic	Account	Network	DSS Keys	Phone	Contacts
Wizard	Status		Internet Dort				
Static IP Address	Wizard			•			
			Static IP /	Address 🕕			

1.If chosen DHCP, the phone will be assigned a IP address automatically, click the button "Next" to enter the web page of "Account Configuration".

2.If chosen Static IP, user should input the IP address manually for the phone, click the button "Next" to enter the web page of "Static IP Address".

atcom

atcom	Basic	Account	Network	DSS Keys	Phone	Contacts
Status						
Wizard		Static IP Setting	gs			
	_	* IP Add	ress	172.16.0.7	'5]
		* Subne	t Mask	255.255.25	55.0]
		* Default	t Gateway	172.16.0.1]
		Primary E	DNS	202.36.134	4.133]
		Seconda	ry DNS	8.8.8.8		
			Back	Next		

After IP address filled manually, click the button "Next" to enter the web page of "Account Configuration", or click the button "Back" to back to web page of "Network Configuration".

Network Configuration can be completed in below webpage:

Via web **"Network"→"Basic"**

atcom	Basic Account	Network	DSS Keys	Phone	Contacts
Basic	· · · · ·				
Wi-Fi	Internet Port				
	O DHCP	D			
Advanced	Static IP	Address 🕜			
	* IP Add	dress	172.16.0.7	/5]
	* Subne	et Mask	255.255.2	5 <mark>5.</mark> 0]
	* Defau	lt Gateway	172.16.0.1]
	Static DNS		● off ◎ c	Dn 🕜	
	Primary I	DNS	202.36.13	4.133	
	Seconda	ary DNS	8.8.8.8		



2.2. Account Configuration

The account configuration info will be saved to Line.

15						S English
atcom	Basic	Account	Network	DSS Keys	Phone	Contacts
Status		CTR C-Hi				
Wizard		SIP Settings Account Active		Enable	•	
		Label				Ð
		Display Name				Ð
		Register Name * User Name		5008	- C (Ð Ð
		Password		••••))
		* SIP Server		172.16.0.55		ort 5060
		* SIP Server	Back	172.16.0.55 Finish	Po	ort 5060

Click the button "Finish" to save network configuration and account configuration, and click "Back" back to the previous web page.

Account Configuration can be completed in below webpage:

Via web **"Account"→"Basic"**

atcom	Basic	Account	Network	DSS Keys	Phone	Contacts
Basic						
Colore	4	Account		Account 1	•	
Codecs		Register Stat	us	Registered		
Advanced		Account Acti	ve	Enable	. .	
		Label			6	
		Display Name			6	
		Register Nam	e		6	
		* User Name		5017	6	
		Password		••••	6	
		* SIP Server		172.16.0.55	Por	t 5060 🕜



10 C

2.3. Configure the WiFi on the WEB

A68W connect to network via Wi-Fi acquiescently, click "Search Wi-Fi" button to search the available Wi-Fi.

atcom	Basic	Account	Network	DSS Keys	Phone	Contacts
Basic						
Wi-Fi		Wi-Fi Setting (W	'hen wifi is on, pl	ease disconnect		able!)
Advanced		Search Wi-F	ï		0.1 (
		Current SSID				
		Secret Key				

After all available Wi-Fi hotspots are list out, click the round behind the available Wi-Fi which you want to connect.

Index	SSID	Signal	Select
1	cisco	211	0
2	360	207	0
3	re	207	0
4	amoji	205	0
5	CHINA TELECOM	205	0
6	360 WiFi-C9	197	0
7	a de tablecido:	197	0
8		190	0
9	inWatch3	189	0
10	ChinaNet-7A6t	188	0
11	360WiFi-9F	185	0
12	iTV-7A6t	185	0
13	inWatch2	185	0
14	Royale International China	184	0

Input the right "**Secret Key**" and then click the "**Confirm**" button, the phone will reboot, after rebooting, the Wi-Fi icon will display on the home screen, it means connect failed when the icon come with **S**, then you should check the configuration. if the icon come with **S**, it means connect successfully.